


Numatic

numatic.com


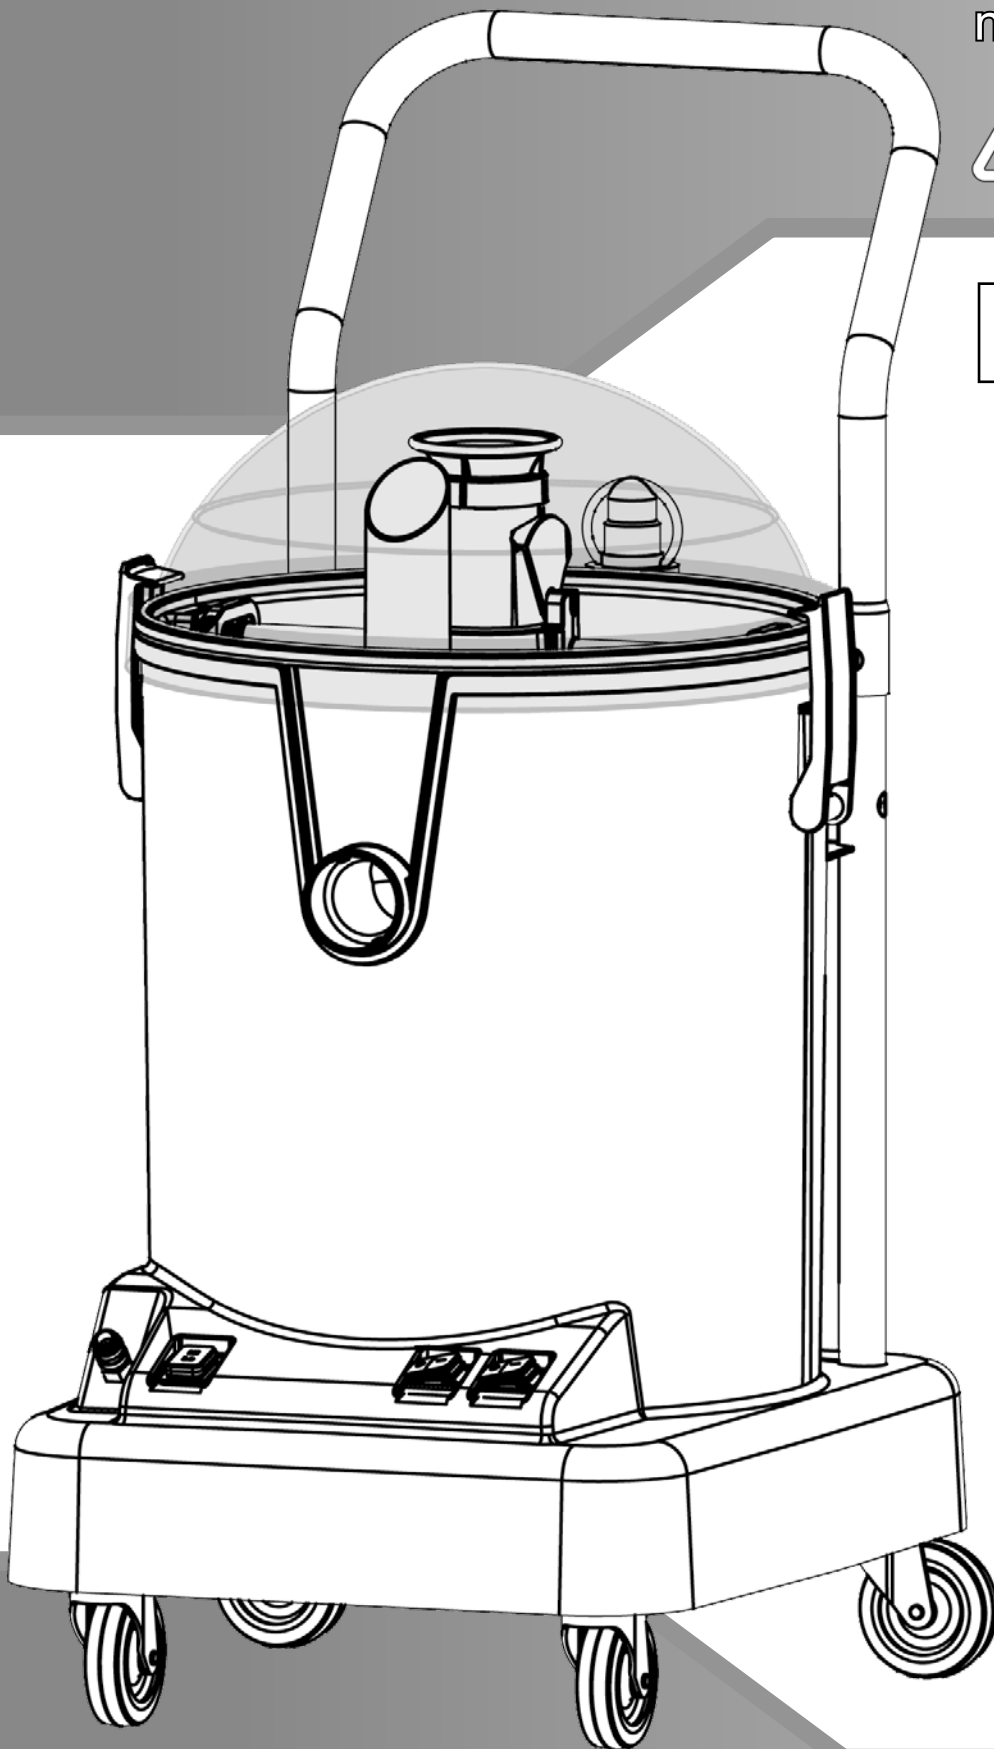


NHL15



Original Instructions

CAUTION, Read the Instructions before using the machine.

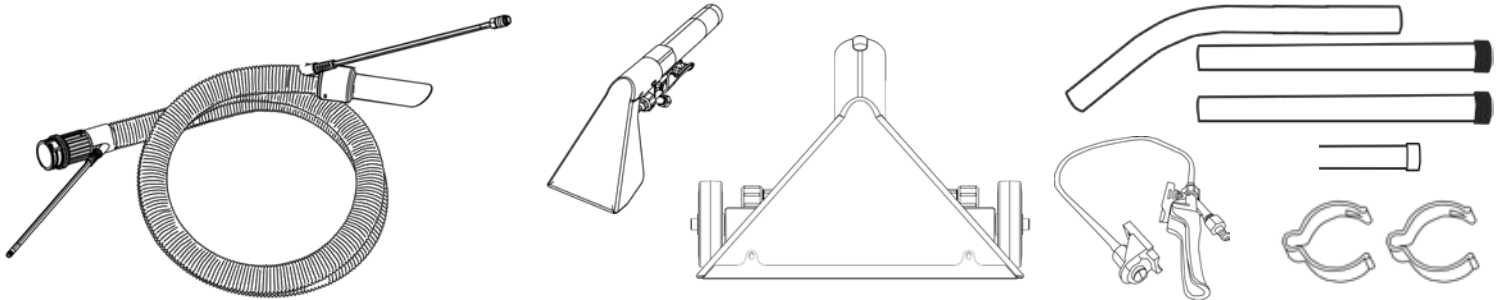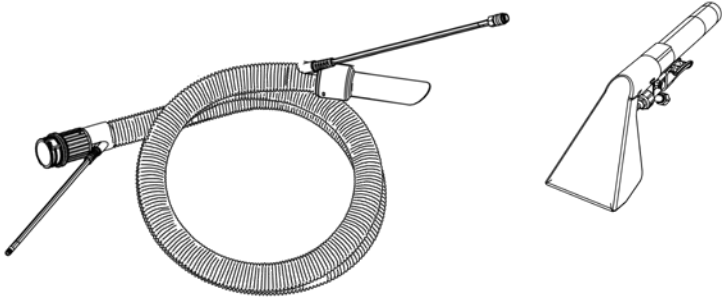


Cleaning Tips

Good carpet cleaning is very much a team effort between operative and machine and a few well established rules to be followed to get the best results.

1.	Move furniture.
2.	Vacuum thoroughly.
3.	Test carpet for colour fastness (out of sight).
4.	Spot clean as necessary.
5.	Open window for ventilation.
6.	Always use a low foaming carpet cleaner.
7.	Always work backwards towards the Exit Door.
8.	Clean full carpet area - Hi pump setting for heavy soiling and Lo pump setting for lightly soiled areas.
9.	Do not overwet remember ' What goes in, must come out again!'
10.	Leave windows open to help carpet dry naturally.

Product Features

- * TriJet carpet extraction head.
- * Lo pressure for lightly soiled areas.
- * Hi pressure for heavy soiled areas.
- * Quality upholstery tool supplied.
- * Dump hose emptying option.
- * 4 wheel mobility.
- * 15 litres capacity.
- * Full Aluminium tool head.

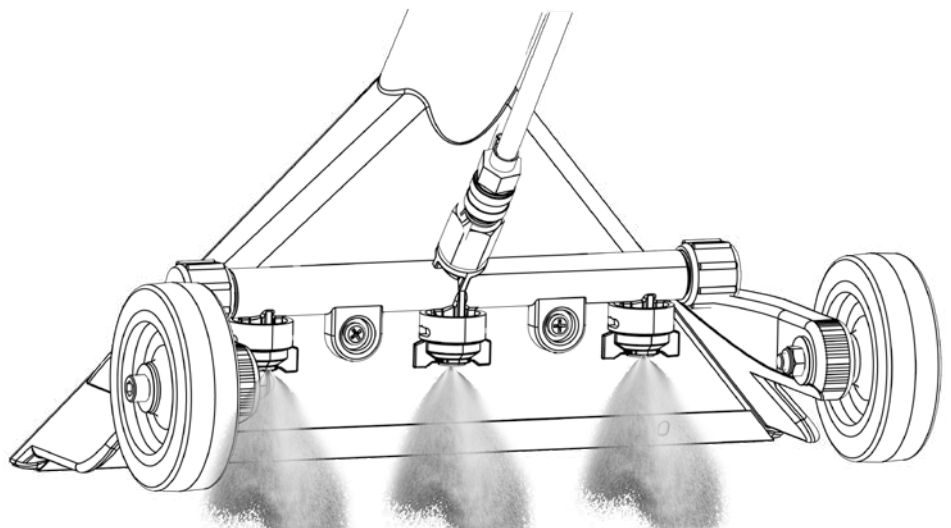

The Hi - Lo system puts you in complete control, when you need more, you get more and when you need less, you are but a switch away.



Cleaning Tips / Kit B26 - BS27	Page 2
Index	Page 3
Quick Set Up Guide	Page 4
Machine Overview	Page 5
Rating Label / PPE / Critical components / Specifications	Page 6
Information for wet machines	Page 7
Fault finding	Page 8

Machine Set up.

Fitting the handle	Page 9
Removing the dome and waste water tank	Page 10
Filling the Nuchem / water tank	Page 10
Chemical usage	Page 11
Replacing waste water tank and the dome	Page 12
Fitting vacuum hose	Page 12
Connecting solution tube	Page 12
Assembling wands and floor tool	Page 13

Operating the machine

Controls and switches	Page 14
Correct way to use the machine	Page 14
Using the hand tool	Page 15

Cleaning the machine

Emptying the waste water	Page 16
Removing the wands and floor tool	Page 16
Cleaning the Tanks and filters	Page 16
Blocked Nozzles	Page 17

Maintenance


Maintenance	Page 18
Replacing the vacuum filter	Page 18
Replacing vacuum or pump fuses	Page 18
Changing the cable	Page 19
Troubleshooting	Page 20
Recommended spare parts	Page 20
Technical helpline	Page 20
Wiring Diagram	Page 21

Documentation


Warranty	Page 22
Declaration Documents	Page 23
Company Addresses	Page 24

Quick Set Up Guide


PLEASE READ BEFORE COMMENCING ANY OPERATION
After the removal of all the packaging, carefully open and check the contents.

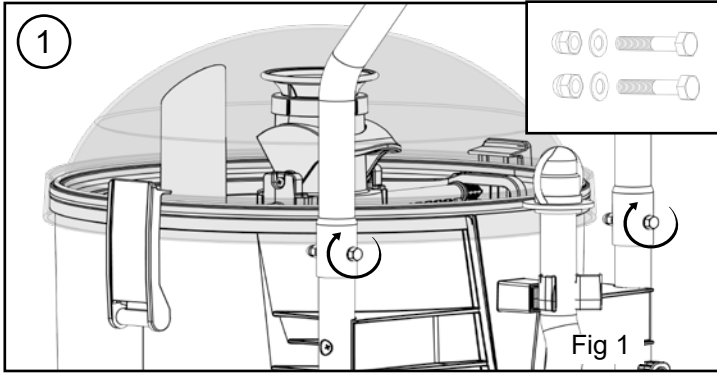


Fit the handle to the machine using the fixings supplied. (Fig 1)

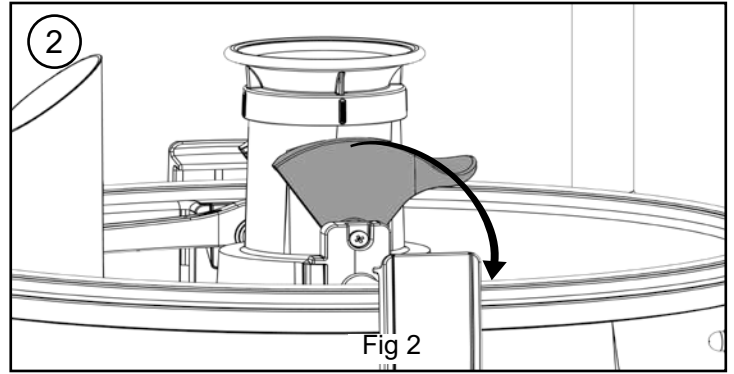


Remove the dome, unclip and remove the waste water tank (Fig 2)

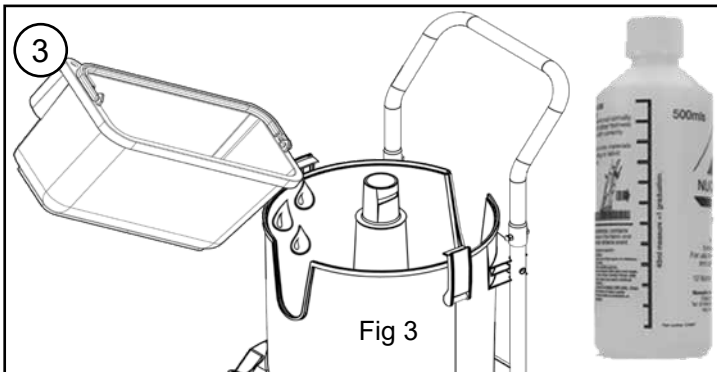


Fill the water tank, cleaning solution up to the full level mark, avoid pouring fluids into the central tube as this leads directly to the vacuum motor (Fig 3).

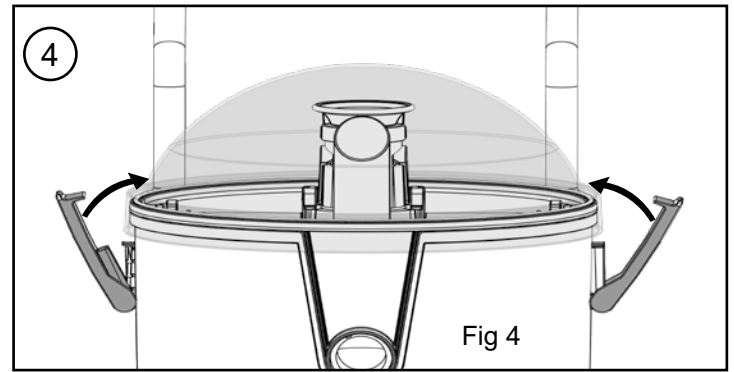


Replace the waste water tank, lock in place using the red locking clamp and replace the dome. (Fig 4)

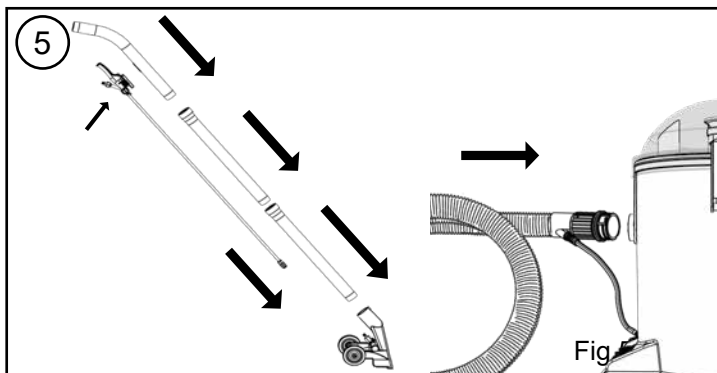

Assemble the wands, floor-tool, hose and secure to the machine (Fig 5)

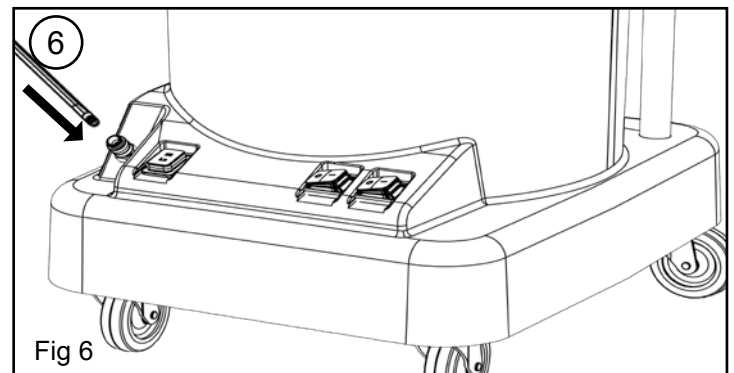


Connect the solution tube (Fig 6)

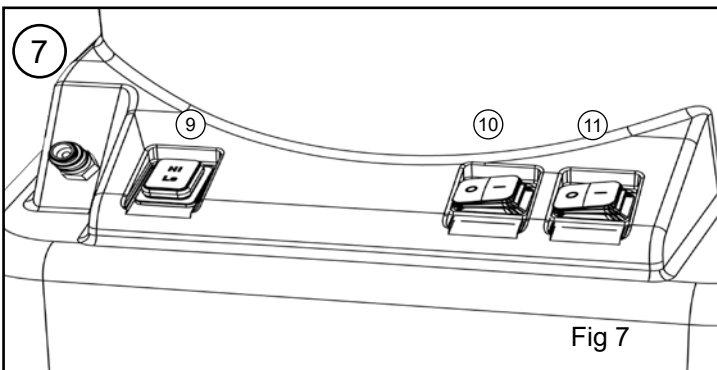





The switches on the front of the machine, control the vacuum and pump operations. (Fig 7)

- 9. Hi Lo Pump Switch
- 10. Vacuum Switch
- 11. Pump Switch

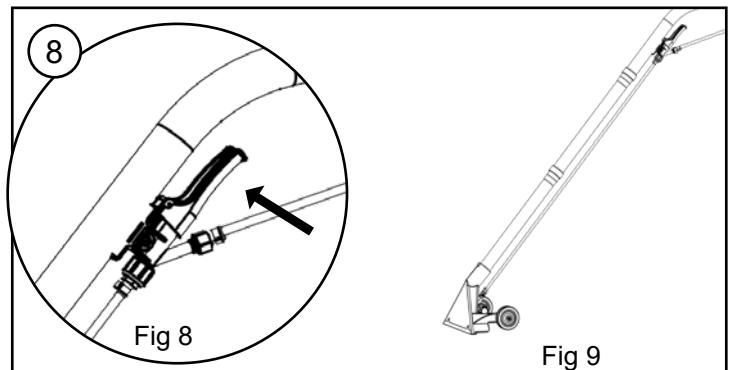

Operate the trigger (Fig 8) to apply water and vacuum the carpet (Fig 9).


Machine Overview

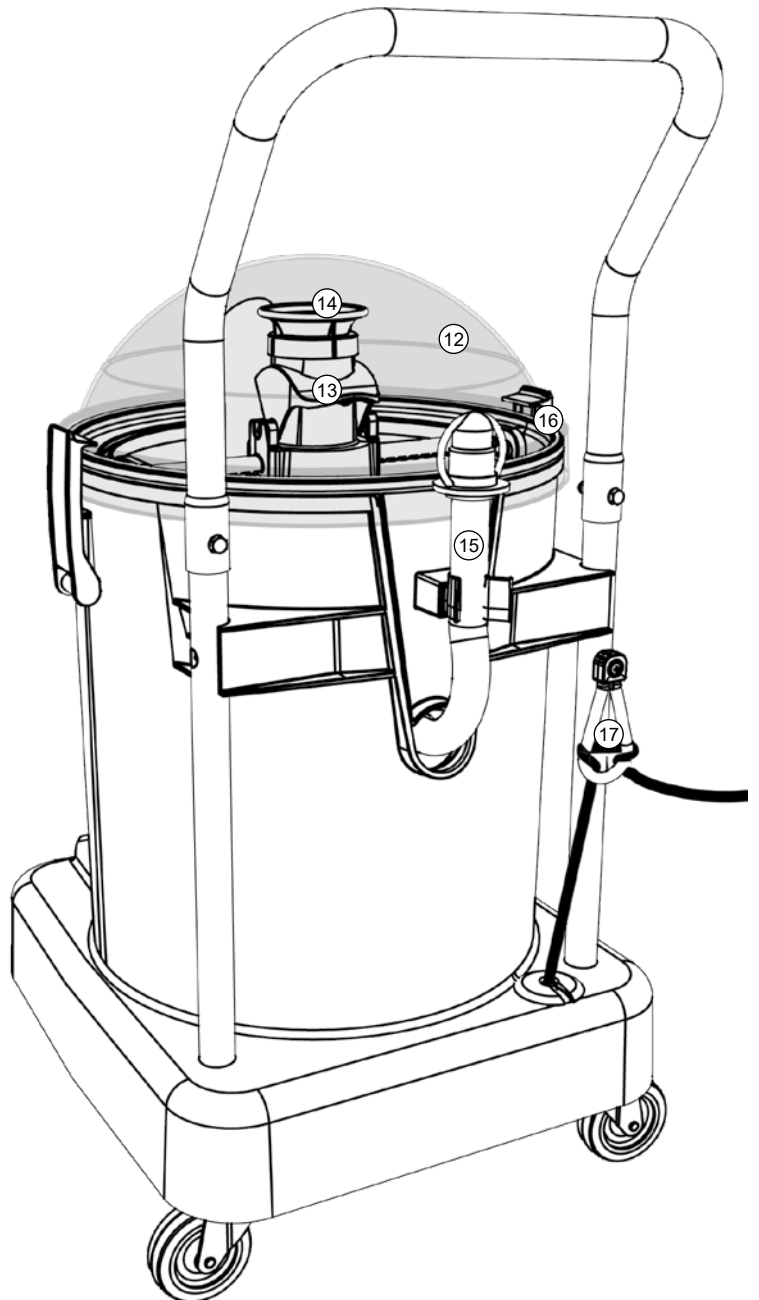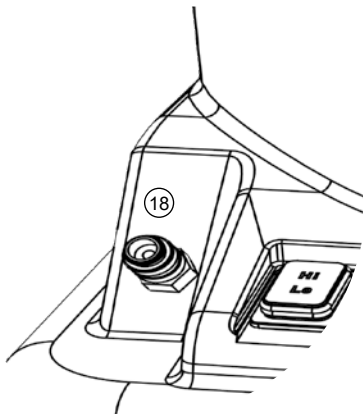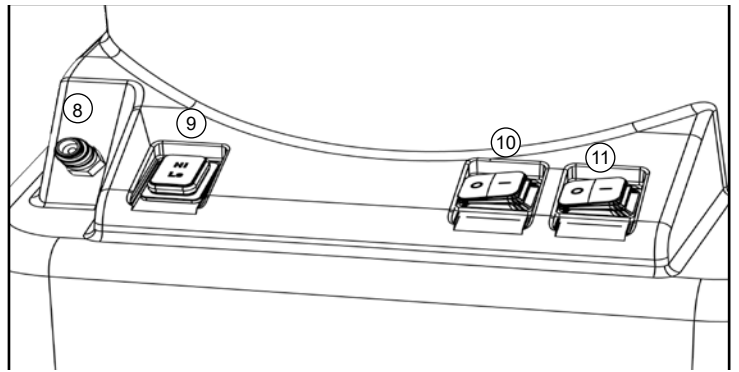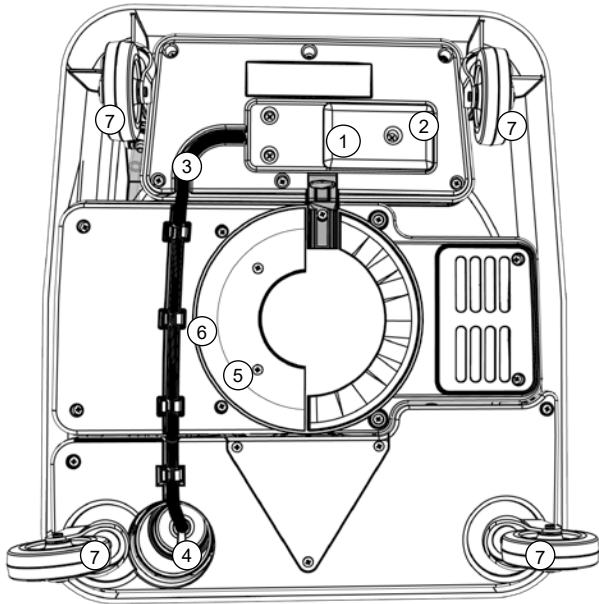

1. Plugged Cable cover
2. 6.3 amp time lag fuse x 2.
3. Plugged cable
4. Cable grommet
5. Vacuum filter cover
6. Vacuum filter
7. Castor wheels x 4
8. Solution tube quick release
9. Hi Lo Pump Switch
10. Vacuum Switch
11. Pump Switch
12. Dome
13. Waste tank locking toggle
14. Waste tank vacuum filter
15. Waste tank emptying hose
16. Handle
17. Cable strain relief
18. Solution tube quick release

For full easy to follow
Instructions on
the NHL 15 set up and use,
See quick set up guide
page 4

(EN) About your machine

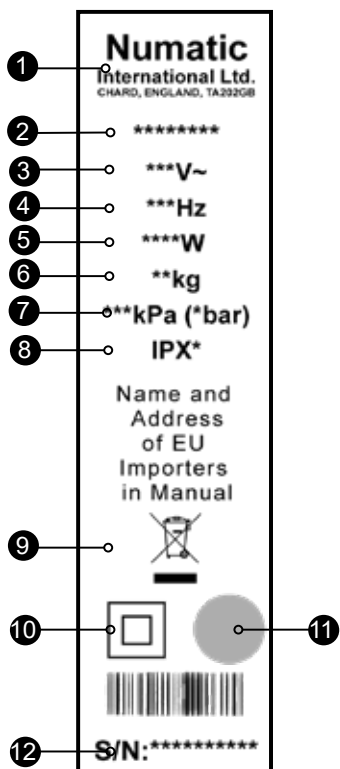

1	Company Name & Address
2	Model
3	Voltage/Alternating Current
4	Frequency
5	Rated Input Power
6	Weight
7	MAX Pressure
8	Ingress Protection
9	WEEE Logo
10	Protection Class 2 Symbol
11	Approval Mark
12	Machine yr/wk Serial Number

Every time before use:-

Mains Cable.
Waste tank vacuum filter.
Hose, wands & tri jet assembly

Weekly

NuChem - water tank barrel filter (wash)
Vacuum filter (Check)
Visual inspection of Drum seal and bucket seal

Maintenance

WEEE Legislation (Waste, Electrical and Electronic Equipment)

Vacuum cleaner, accessories and packaging should be sorted for environmentally - friendly recycling.

(Only for UK/EU Countries)

Do not dispose of vacuum cleaner into household waste! According to the European Directive 2012/19/EU on waste electrical and electronic equipment and its incorporation into national law.

Vacuum cleaners that are no longer suitable for use must be separately collected and sent for recovery in an environmentally - friendly manner.



PPE (personal protective equipment). That may be required for certain operations.

Ear Protection	Safety Footwear	Head Protection	Safety Gloves	
Eye Protection	Protective Clothing	Dust / Allergens Protection	Hi Viz Jacket	
Caution Floor Sign				

NOTE: A risk assessment should be conducted to determine which PPE should be worn.

Failure to rectify the problem or in the event of a breakdown contact your Numatic dealer or the Numatic Technical helpline +44 (0)1460 269268

Safety Critical Components

Mains leads:

HO5VV-F - 3 x 1.00mm - 10m
6.3 amp time lag Fuse

Information for Spray / Extraction use Vacuum Cleaners

Warning

Read the instruction manual before using the machine.

Operators shall be adequately instructed on the use of these machines.

As with all electrical equipment, care and attention must be exercised at all times during use, in addition to ensuring that routine and preventative maintenance is carried out periodically to ensure safe operation. Failure to carry out maintenance as necessary, including the replacement of parts to the correct standard could render this equipment unsafe and the manufacturer can accept no responsibility in this respect.

The machine shall be disconnected from the mains by removing the plug from the power supply socket during cleaning or maintenance and when replacing parts or converting the machine to another function.

This machine is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge.

Children being supervised are NOT to play with the machine.

This appliance is intended to be assembled, cleaned and maintained by an adult.

This machine is not a toy.

This machine is not suitable for picking up hazardous or explosive dust. Contact your local distributor if you require a machine capable of performing these tasks.

If foam/liquid comes out of machine exhaust, switch off immediately.

Allow the accumulated liquid to drain out through the machine exhaust, check the float assembly to ensure correct operation, empty the container if full of liquid, reassemble the machine.

Immediately upon start up there will be a certain amount of liquid issuing from the machine exhaust which will be the residue of liquid still within the power head. This will be quickly discharged after which the machine should function normally.

Liquid ejected from the machine could be hazardous as a result of its temperature, pressure or chemical content.

Caution

Ensure that the filtration system fitted to the machine is suitable for the material being collected.

This machine is for indoor use only.

This machine shall be stored indoors only. .

When moving from one place to another, consider the weight of the machine.

Notes

You must ensure that the filtration system fitted to the machine is suitable for the material being collected.

This product complies with the requirements of IEC/EN 60335-2-68.

This product complies with the requirements of clause 20 of IEC/EN 60335-2-69 for Stability and Mechanical Hazards.

The primary use for this machine is commercial, for example in hotels, schools, hospitals, factories, shops and offices.

If the vacuum cleaner stops working, remove the plug from the power supply before investigating where the fault lies.

The vacuum cleaner should be inspected after use for damage.

The power light will illuminate, when your machine is connected to a suitable power supply (where fitted).

Do

- Use a bag and filter at all times when using 'dry'.
- Keep your machine clean.
- Keep filters clean.
- Regularly clean the water level limiting float safety valve and examine for signs of damage or correct operation.
- Keep hoses and tubes clear.
- Replace any worn or damaged parts immediately.
- Regularly examine the power cord, if damage is found, the power cord must be replaced by a special cord available from Numatic or its service agents.

Don't

- Use steam cleaners or pressure washers to clean the machine or use the machine in the rain.
- Immerse in water for cleaning.
- Allow any inexperienced repairs. Call the experts.
- Use wet if float valve is not functioning or fitted.
- Use to suck up hot ashes, or lighted cigarette ends.
- Run the machine over the power cable during operation as a hazard may occur.
- Pull on the cable to unplug the machine from the power supply.
- Walk over-wet carpets, upholstery or fabrics.
- Walk on clean carpets until fully dry.
- Attempt machine maintenance or cleaning unless the power supply plug has been removed from the supply outlet.
- Under any circumstances place foreign objects including (but not limited to) air fresheners, air freshener capsules or scented beads of any type into the top filter of the machine. Doing so can be dangerous and risk damage to the machine and may invalidate the machine warranty.

Fault Finding - Wet - Spray Extraction

Spray extraction machines only

- Use only approved cleaning preparations.
- Use defoamer if necessary.

Use of detergents

When using any detergent with this machine, please ensure you have read the safety data on the container and you are familiar with the procedures to clear up spills, inhalation, skin and eye contact.

This product complies with the requirements IEC/EN 60335 -2-68.

When moving from one place to another, consider the weight of the machine.

Spray extraction maintenance/fault finding

If the vacuum cleaner stops working switch off and remove the plug from the wall, before investigating where the fault lies.

If the vacuum cleaner has a blockage and will not pick up liquid, switch off and remove the plug from the wall.

Remove the dome and empty the liquid out of the waster water container.

If the waster water container is empty, check that the floor tool wands and hose are not blocked.

If no spray from nozzle the solution tank is empty, refill the solution tank.

Flush the system with clean water after use.

If the machine stops spraying then check the clean water tank level, empty the waste water tank and refill the clean water tank as necessary.

If the spray nozzles are blocked, they have been designed to be easily cleaned. Undo the spray nozzle cap and clean the nozzles.

A pin maybe used to clear the blockage.

After use always inspect the machine for damage.

Caution.


**This machine has been designed to clean carpets and floors.
It must not be used when stood in water.**

Data


Model	Motor	Airflow	Suction	Cleaning Range	Capacity Wet	Noise
NHL 15	1000W	49 L/sec	2400mm	26.8m	15 Litres	75.6 dB(A) uncertainty +/- 0.2 dB(A)
Pump		Solution Tank		Gross Weight (Full)		SizeH x W x D
2 Bar 30psi 4 Bar 60 psi		15 Litres		35 Kgs		435 x 425 x 725 mm

Machine Set-Up


Fitting the handle

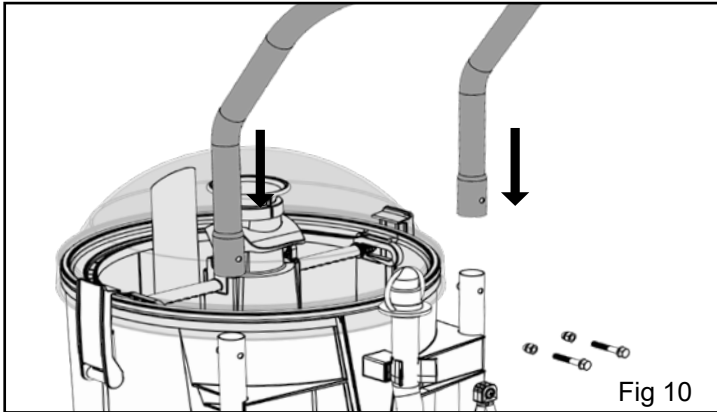



Slide the handle over the two tubes already fitted to the side of the machine. (Fig 10).

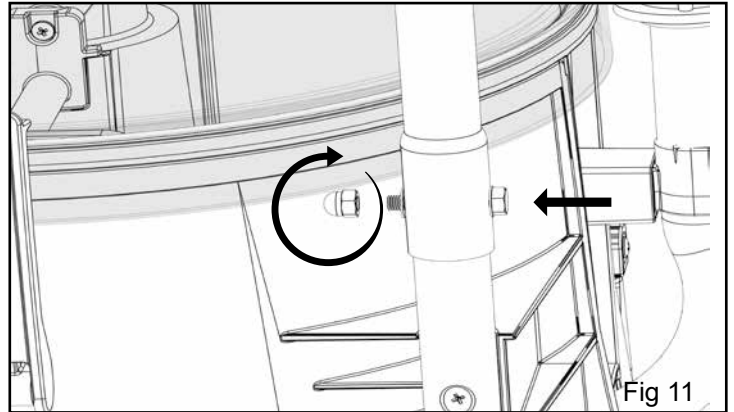

Secure the handle using the nuts and bolts supplied (Fig 11).

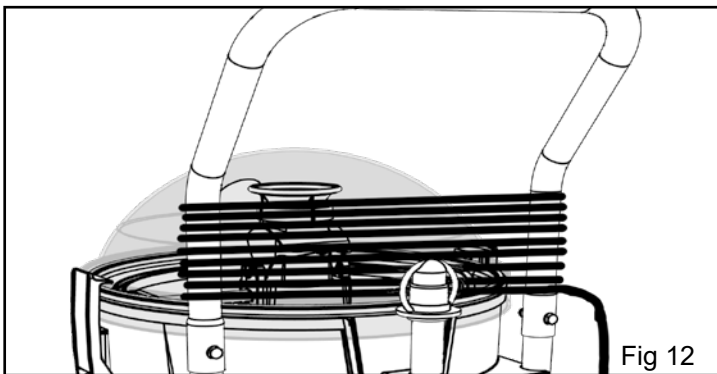

The handle makes an ideal way to store the cable (Fig 12).


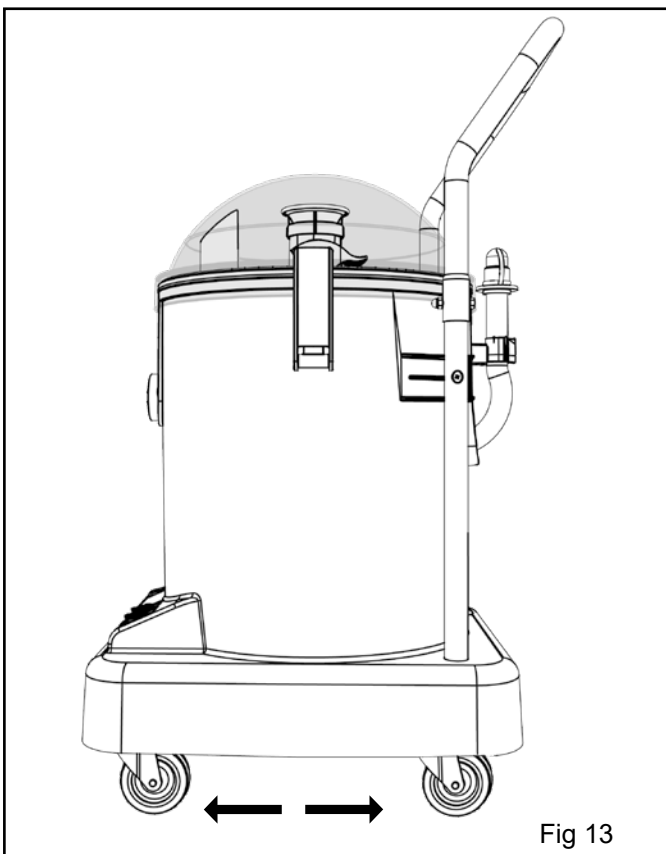
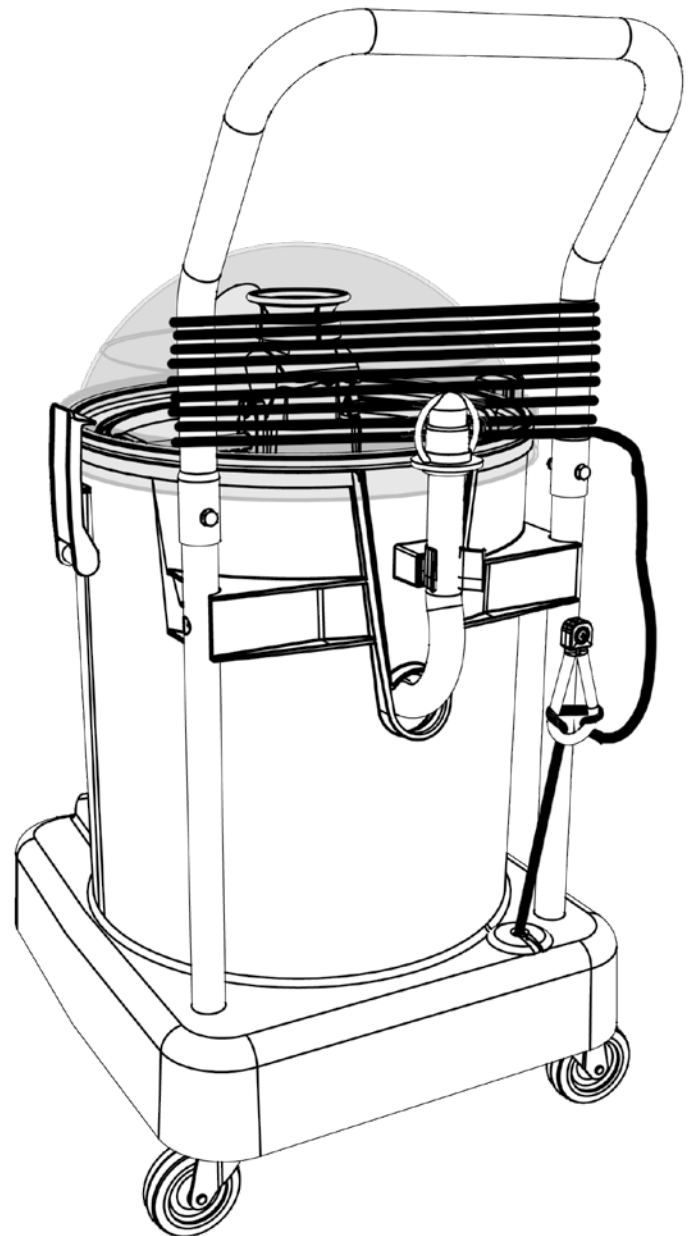


The handle can be used to enable the machine to be easily moved around the area to be cleaned (Fig 13).

Removing the dome and waste-water tank.

To remove the dome, unclip the locking toggles and lift the dome off the machine (Fig 14).

The waste water tank is held into place with a red locking clamp. Undo the clamp (Fig 15) and lift the waste water tank from the machine (Fig 16).

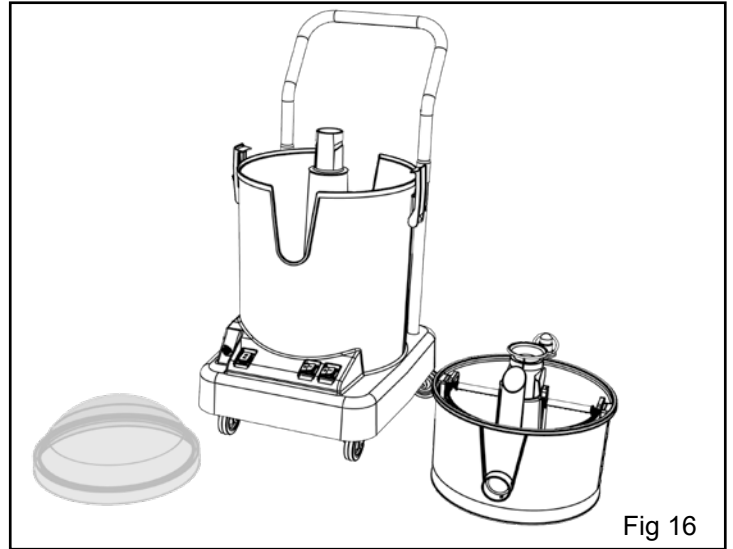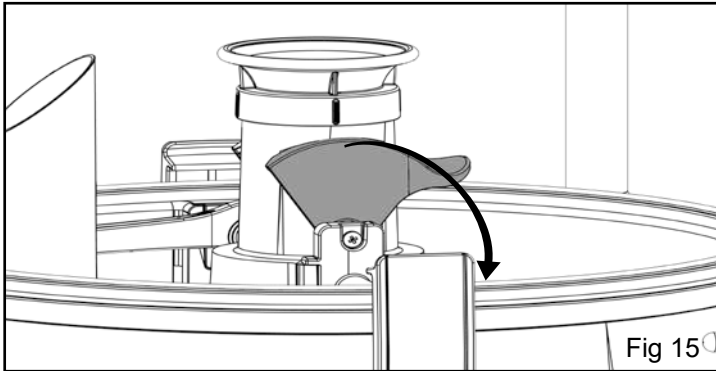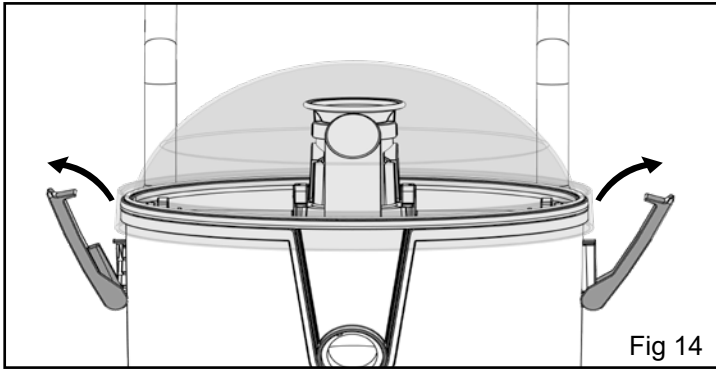

Filling the NuChem / water tank.

The NHL 15 is equipped with a large 15 litre NuChem / water tank allowing large areas to be cleaned in a single fill.

To fill the clean water tank remove the waste water tank and fill using hose, bucket or a suitable container (Fig 17).

Fill to the MAX level mark (Fig 18) located on the inside of the drum.

Ensure the clean water goes into the container and not the central tube.




Note.

Great care must be taken to ensure that contaminants (leaves, hair, dirt, etc) are not allowed to enter the NuChem / water tank during the filling process.

If using a bucket or similar container, ensure it is always clean and free from debris.

Caution:-

Avoid tipping water into the central tube this is leads directly to the vacuum motor (Fig 19).

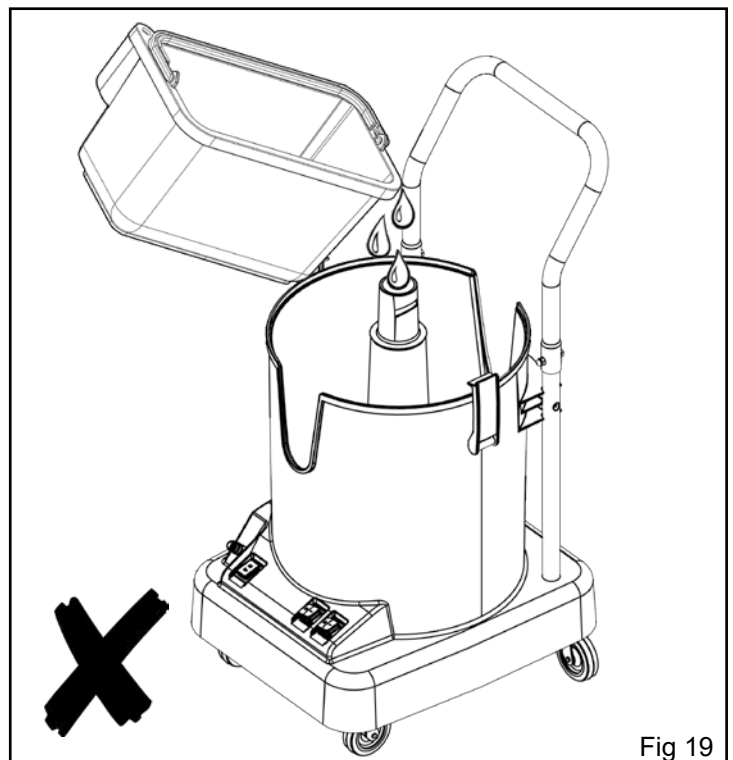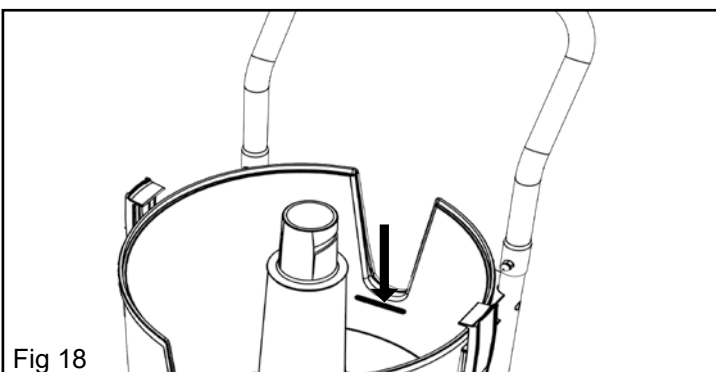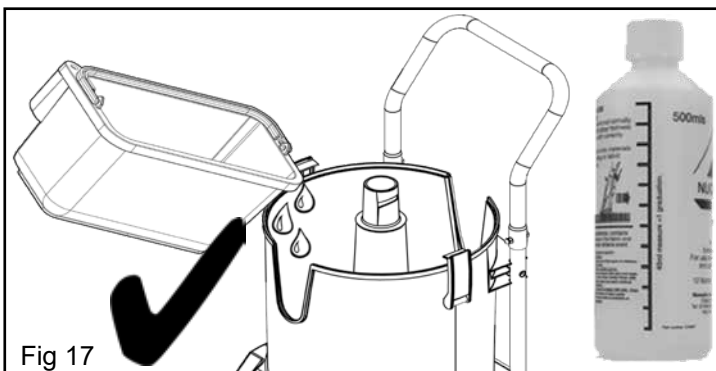

Chemical usage.

Control of substances hazardous to health (COSHH)

For best results use a non-foaming type of chemical, dilute to the manufacturers specification.
For further guidance on hazardous substances refer to HSE website.
Visit <http://www.hse.gov.uk/> for UK information.




When handling and mixing chemicals.

Always ensure that chemical manufacturer's safety guidelines are followed.
Only use non foaming chemicals when using this machine.



NuChem information

NuChem 4 available for this product.

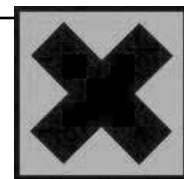

INSTRUCTIONS FOR USE

TEST FOR COLOUR FASTNESS

Find a small area on the material which is not normally on view and test the carpet / fabric for colour fastness by rubbing the cloth dampened with correctly diluted NuChem 4.

FOR NORMAL SOILING:

Pour one 40ml measure into 5 litres of cold water.

FOR HEAVY SOILING:

Pour two 40 ml measures into 5 litres of cold water.

NuChem 4 is non-foaming, bactericidal, contains optical brighteners and leaves no tacky residues in the fabric and is enhanced with both a delicate and discreet verbena scent.

HEALTH AND SAFETY

Caution:

Keep out of the reach of children and pets.

Wear suitable gloves.

Avoid contact with skin and eyes.

In case of eye contact flush with clean water seek medical attention.

In case of contact with the skin rinse with plenty of clean water.

Product data is available from Numatic.



INGREDIENTS

Composition:

Greater than 30% = Among other ingredients water

Less than 5% = Sodium Xylene Sulphonate (12 Normal (40ml) measures)

Classified as irritant

CAS: 1300 - 72 - 7

[Xi] R36 / 37 / 38

Risk Phrases: R36/38: irritating to eyes and skin

Safety Phrases: S2: Keep out of the reach of children

S24: Avoid contact with skin and eyes

S37: Wear suitable gloves for hand use






Replacing the waste-water tank and dome.

To replace the waste-water tank fit into the drum and lock in place with the red locking clip (Fig 20).


If the waste tank is not locked, the machine will lose performance.

Locate the handle into the front of the drum (Fig 21).

Refit the dome and lock in place with the toggles. (Fig 22)

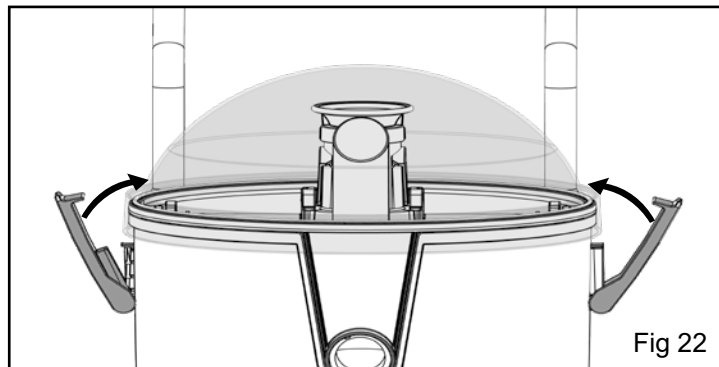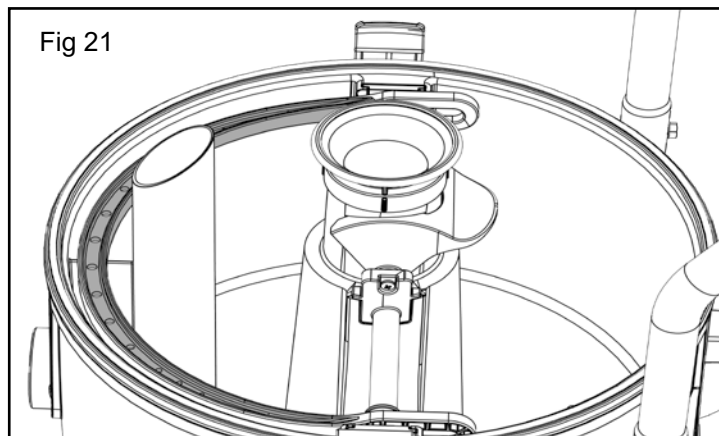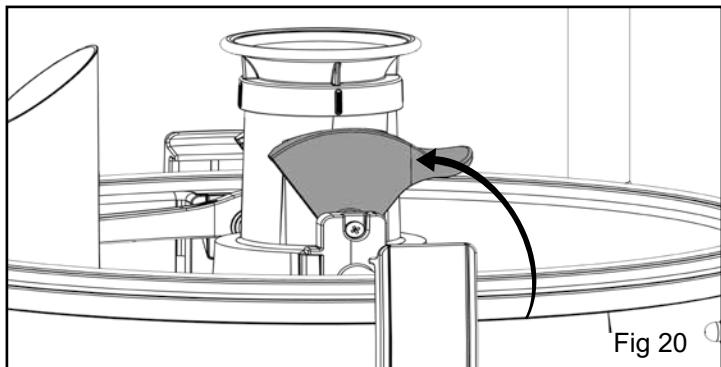

Fitting the vacuum hose.

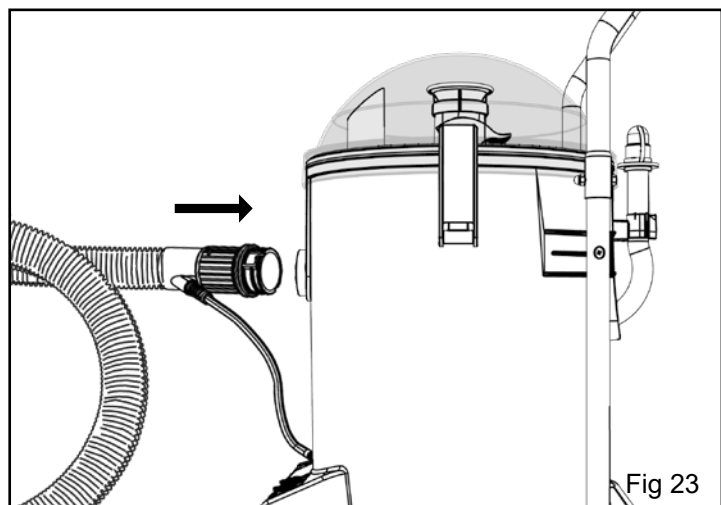


Fit the Vacuum hose to the front of the machine (Fig 23).

Lock into place by twisting the hose securing onto the lugs moulded into the neck of the machine.

Connecting the solution tube.

Fit the solution tube to the front of the machine (Fig 24).


The tube simply push fits into the quick release fitted to the front of the machine.

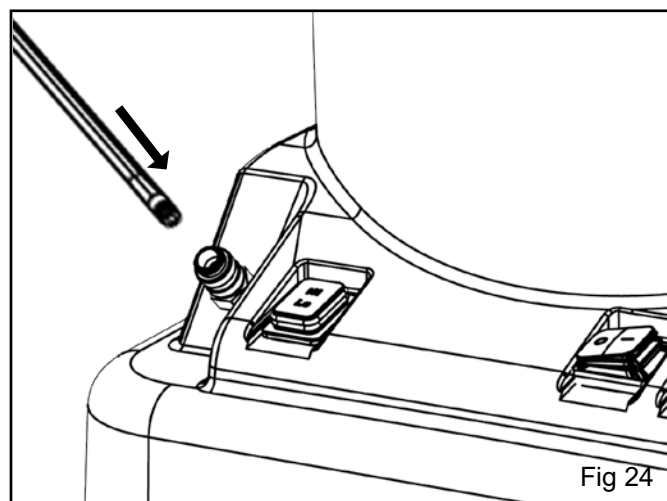

Assembling the wands and floor-tool

The NHL 15 comes with a complete set of high quality stainless steel wands.

To make the machine comfortable to use we have included a small spacer wand allowing the height of the wand set to be adjustable for different height operatives.

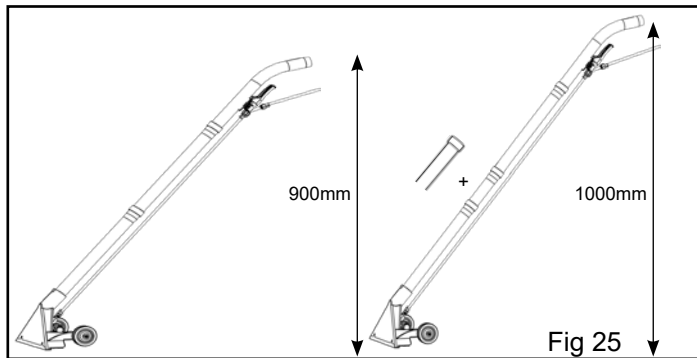


Assemble the wands, as shown.




Adjust the height using the small spacer wand to suit. (Fig 25).

Simply slide the wands together (Fig 26).

Ensure that the wands and floor tool are firmly located before use.

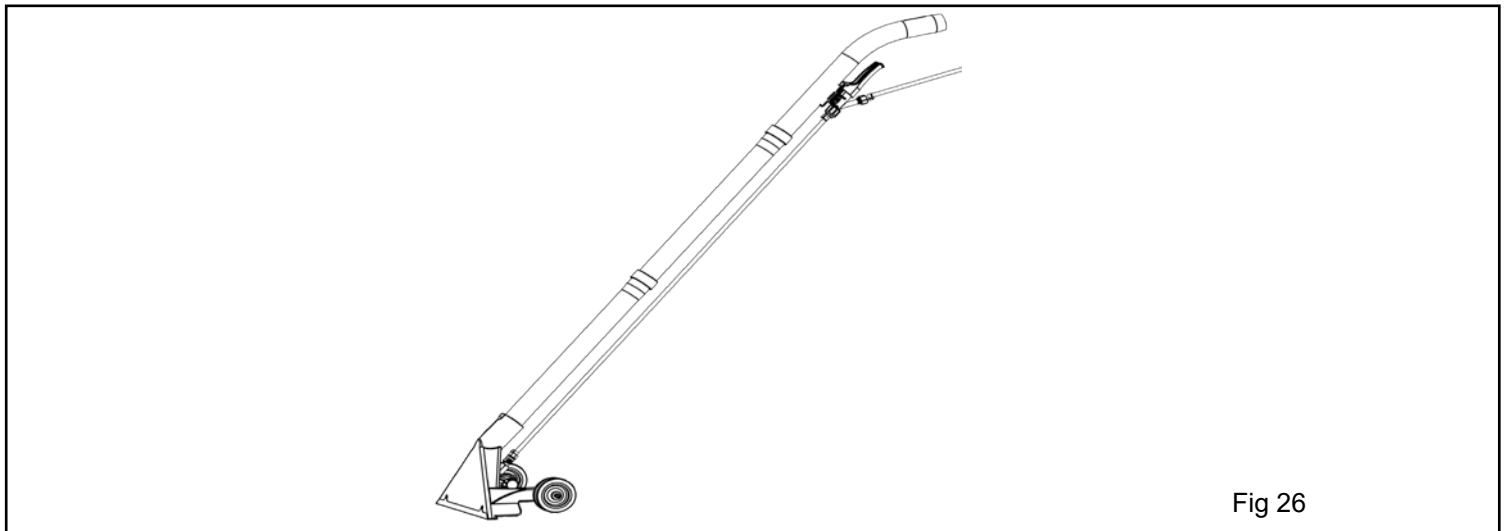

Connecting the solution tube

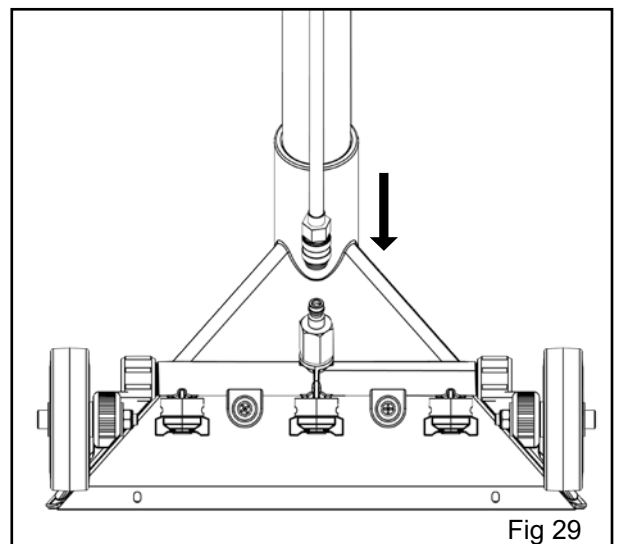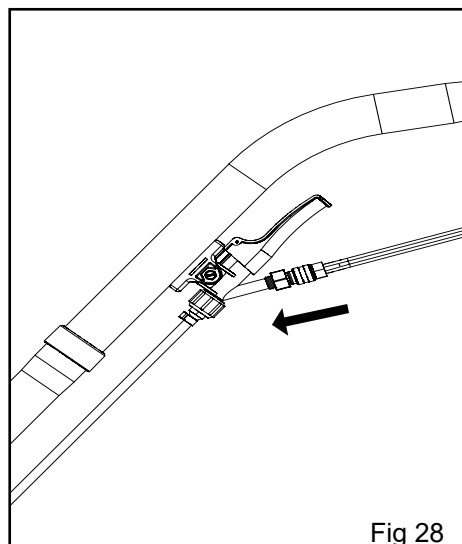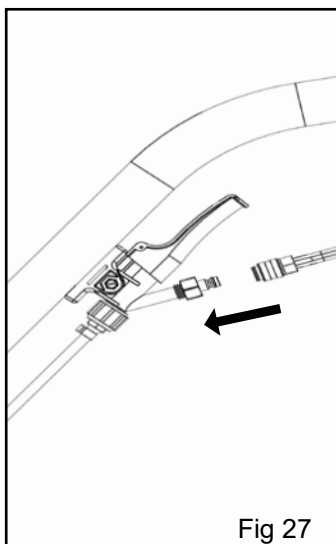

The solution tube has been designed so the trigger can be fitted either way on to the stainless curved wand. (fig 27)

Connect the solution tube from the hose on to the operating trigger (Fig 28).


Connect the solution tube end into the quick release connector fitted onto the floor-tool (Fig 29)
Clip the solution tube to the wand by using the clips supplied in the kit.

Adjust the working height by using the short wand spacer to allow comfortable use.

Operating the machine

Controls and Switches

All the switches on the NHL machine have been designed to enable easy use and they are placed on the front of the machine. These switches are to be operated by hand and NOT to be operated by foot.

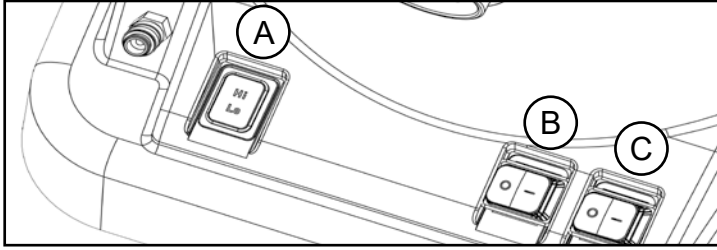

On heavy soiled carpets you can double the pressure of the pump to 60 PSI by using the Hi / Lo switch (A)

To activate the vacuum press 'vacuum switch' (B)

To activate the pump press 'pump switch' (C)

Note.

If machine not functioning correctly, see the Trouble-shooting guide Page 19

Correct way to use the machine

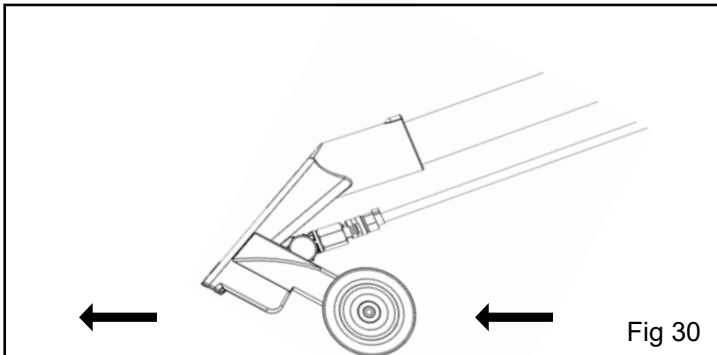


Fig 30

The NHL 15 floor-tool is provided with rear wheels allowing the floor-tool to glide over the surface to be cleaned.

Thus making the cleaning process less tiring and easier to use.

Apply a slight downward pressure on the wand lifting the floor-tool blade from the cleaning surface.

Move the floor-tool forward on the rear wheels (Fig 30).

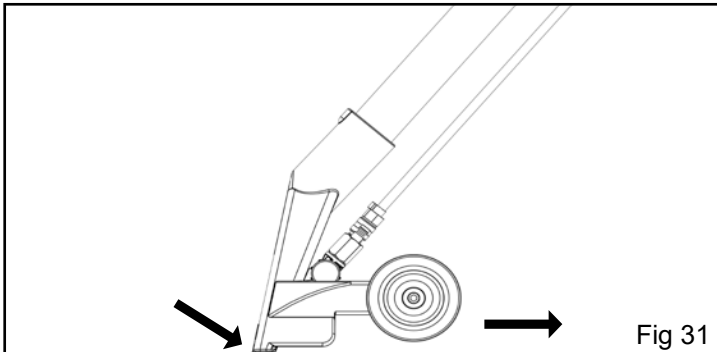


Fig 31

Lift the wand allowing the floor-tool blade to come in contact with the cleaning surface (Fig 31).

Operate the trigger (Fig 32), allowing the cleaning solution to penetrate the carpet and slowly draw the floor-tool rearward Vacuuming the cleaning solution up at the same time (Fig 33).

Work backwards towards the exit door.

For cleaning tips see page 2

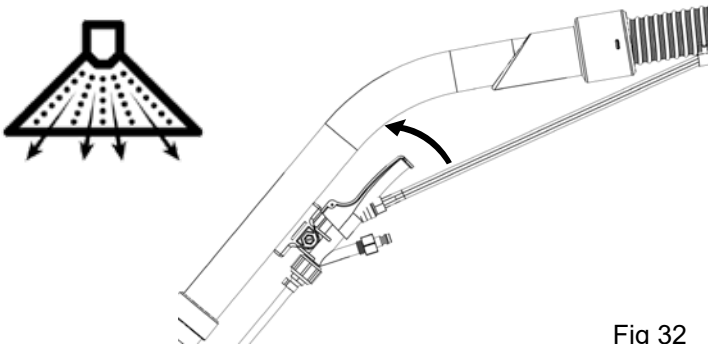


Fig 32

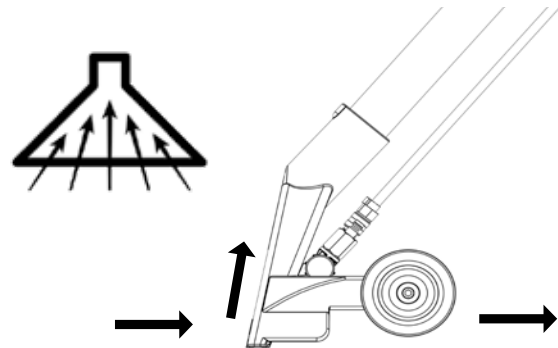


Fig 33

Note.

Do not over wet remember 'What goes in, must come out again!.'

Using the hand tool

The NHL 15 comes with a quality upholstery tool

Fit the upholstery tool to the end of the hose.

Connect the solution tube (Fig 34)

Switch the machine on and operate the trigger to apply the cleaning solution (Fig 35).

The upholstery tool should only be used with the low pressure setting.


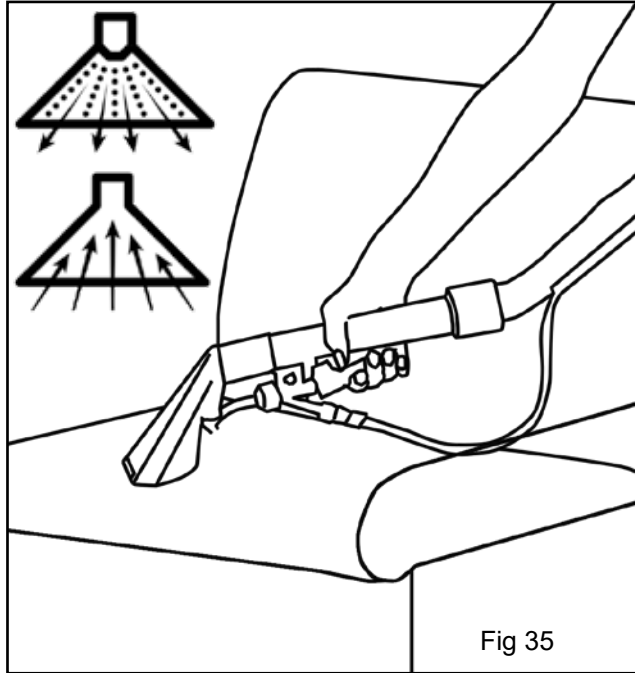


Fig 35

Cleaning the machine

Emptying the waste water

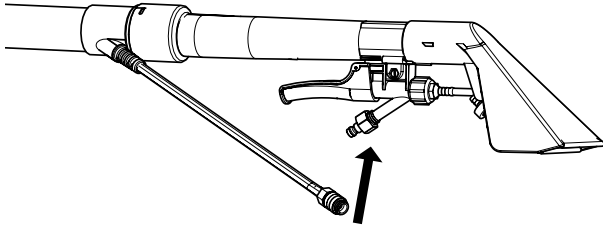

You can empty the waste water tank by using the dump hose attached to the rear of the machine (Fig 36).

The waste water tank can also be removed and carried using the handle to a suitable waste disposal area and emptied (Fig 37).

Follow the national guide lines when disposing of chemicals. (COSHH) see page 11

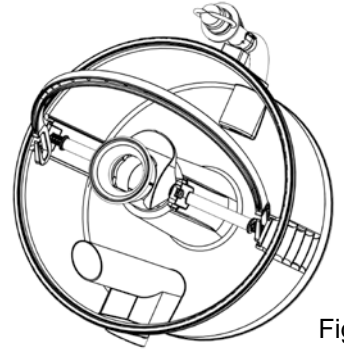


Fig 37

Removing the wands and floor-tool

Caution.

The solution tube will be under pressure, switch off the pump and operate the trigger to release the pressure in the system BEFORE removing the solution tube from the machine.

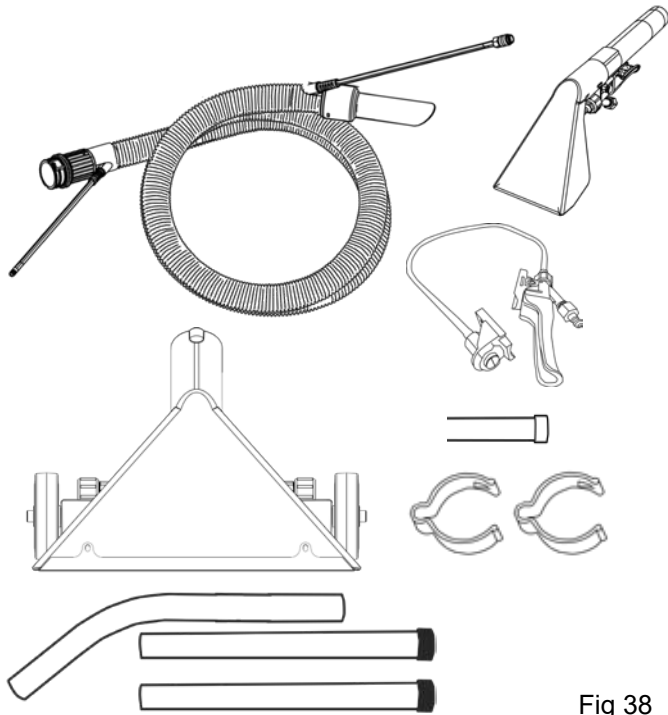


Fig 38

Unclip the solution tube from the machine see NOTE above.

Remove the wands, floor-tool (Fig 38) and hose assembly from the machine (Fig 39).

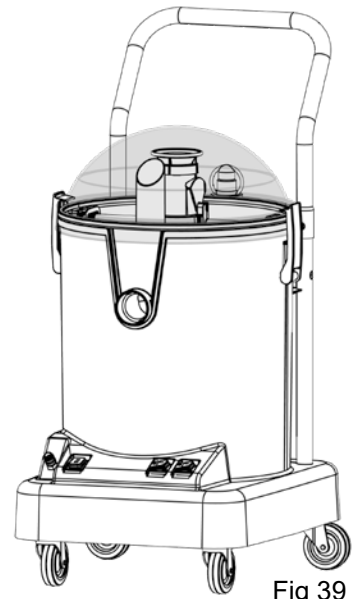


Fig 39

Cleaning the tanks, filters and hoses.

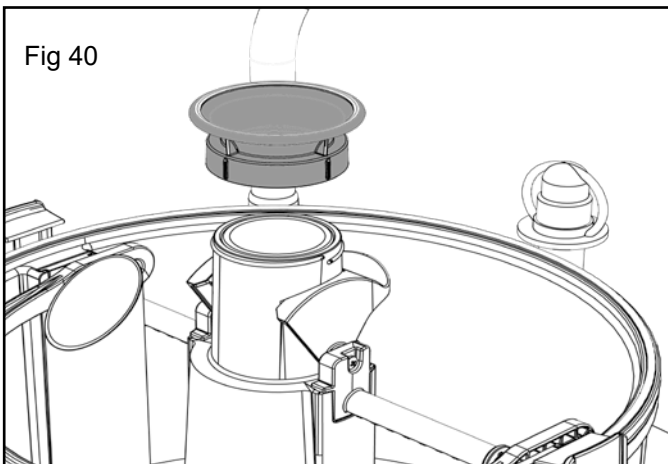


Fig 40

To keep your NUMATIC machine in pristine condition

Clean all filters and tanks regularly.

Remove the waste tank vacuum filter (Fig 40) and clean.




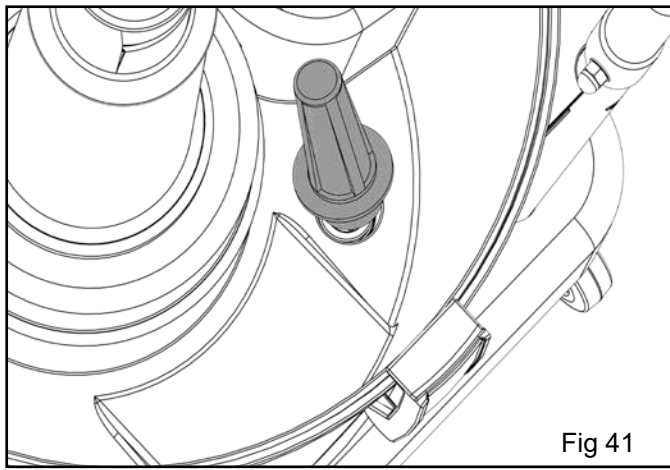



Fig 41

Located in the bottom of the NuChem / water tank is a barrel filter (Fig 41).

Clean if necessary.

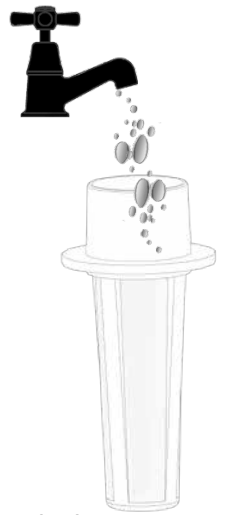

Ensure the machine is cleaned and all hoses and tubes are flushed with cold clean water.

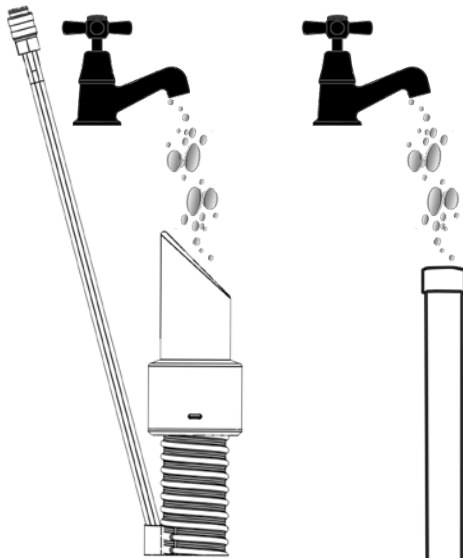

After use, ensure the solution tube has been flushed with clean water for at least 60 seconds.

Blocked nozzles

If the spray nozzles are blocked, they have been designed to be easily cleaned. Undo the spray nozzle cap (Fig 42) remove (Fig 43) check the 'O' ring for damage replace if necessary (Fig 44) and clean the nozzles (Fig 45).

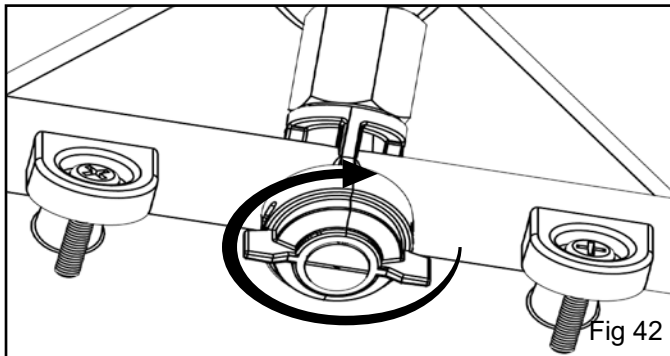


Fig 42

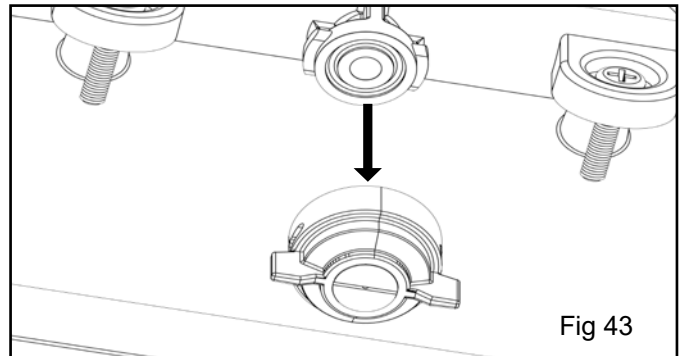


Fig 43

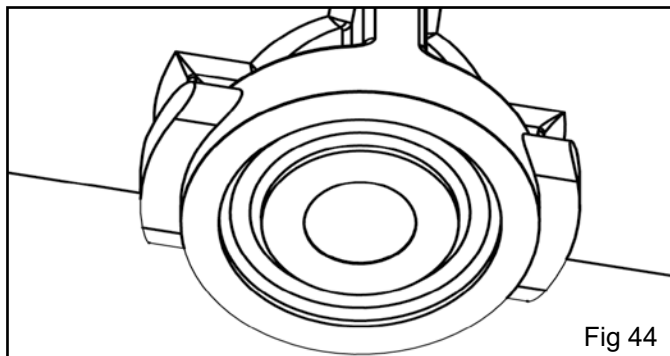


Fig 44

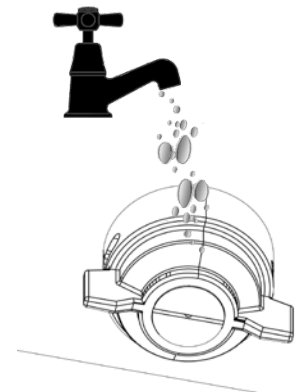


Fig 45

Note.

Inspect the O ring seal and replace if necessary (Fig 44).

Maintenance

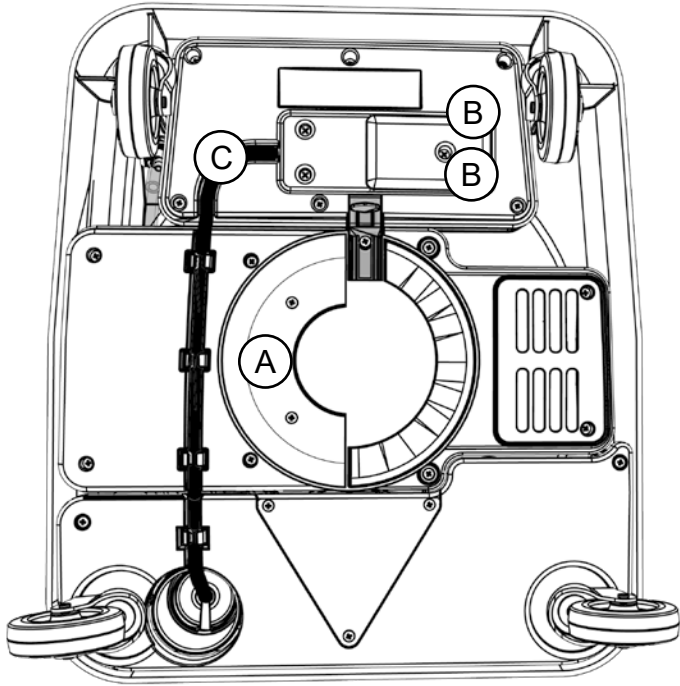


Fig 46

Certain components are located in the bottom of the machine (Fig 46).


Vacuum filter housing. (A)

Mains 6.3 amp time lag fuse holder x 2. (B)

Plugged cable. (C)

Always ensure the machine has been unplugged from the electric supply BEFORE attempting any repairs.

Replacing the vacuum filter

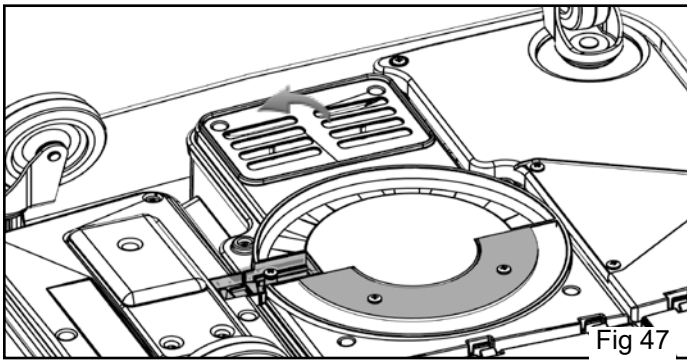


To gain access to this filter remove the filter cover (Fig 47).

Periodically, clean or renew the filter

using (207119) Vacuum filter

It is recommended you only use genuine NUMATIC parts.

Replacing the vacuum and pump fuses


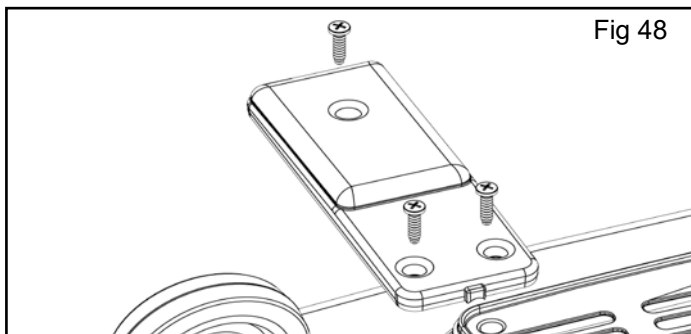


Under the rectangular plate is 6.3 amp time lag fuse holder Remove the plate (Fig 48).

Fuse (B) (See fig 49) is the mains fuse x 2.

Replace using (220179) 6.3 amp time lag fuses (Fig 50).

It is recommended you only use genuine NUMATIC parts.

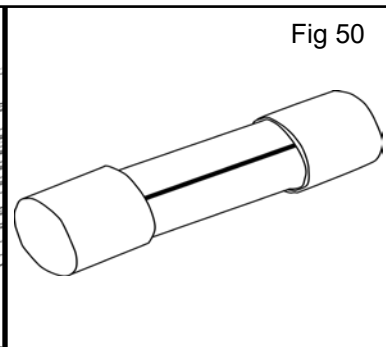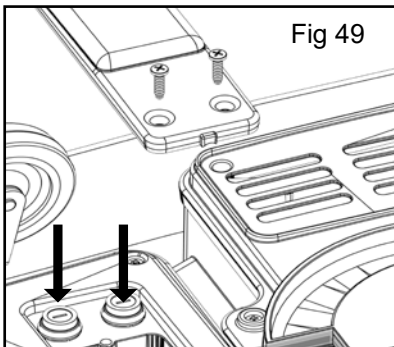

Changing the cable

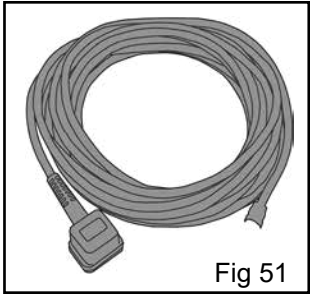


Fig 51

Check the cable before use if the cable is found to be damaged or scuffed (fig 51) replace with a genuine Numatic part.

The Cable has been designed to be changed easily.

Unscrew the cable / fuse cover plate (fig 52)

Ensure you dispose of the cable in a proper manner.

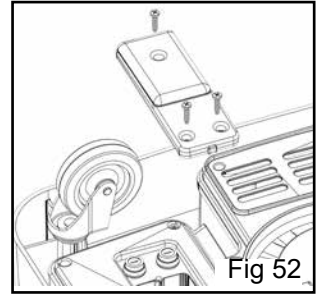


Fig 52

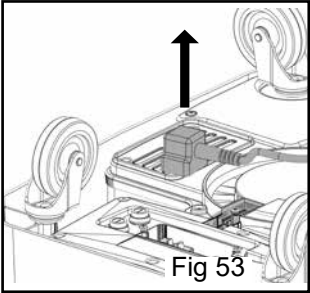


Fig 53

Lift the cable off the pins (fig 53) and remove from the plastic clips (fig 54).

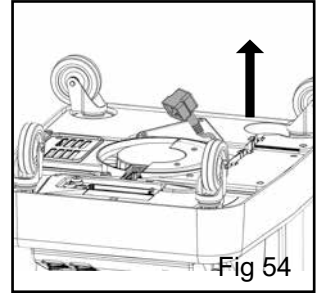


Fig 54

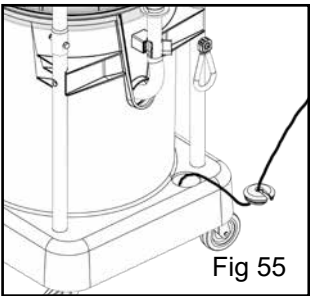


Fig 55

Remove the rubber grommet, free the cable from the machine (fig 55)

Unscrew the cable strain relief and replace the cable.

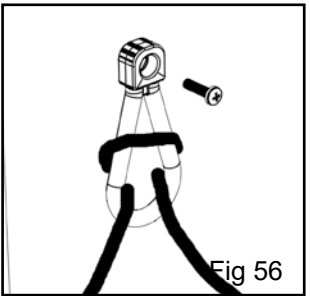


Fig 56

Fit the new cable to the strain relief (fig 56) and refit to the machine (fig 57).

Refit Grommet and clip cable in place to the bottom of the machine (fig 58).

Refit cover and secure with the 3 retaining screws (fig 59).

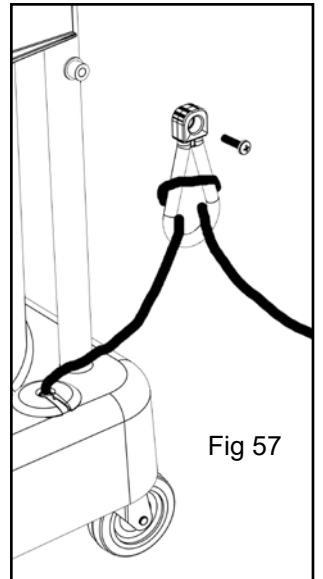


Fig 57

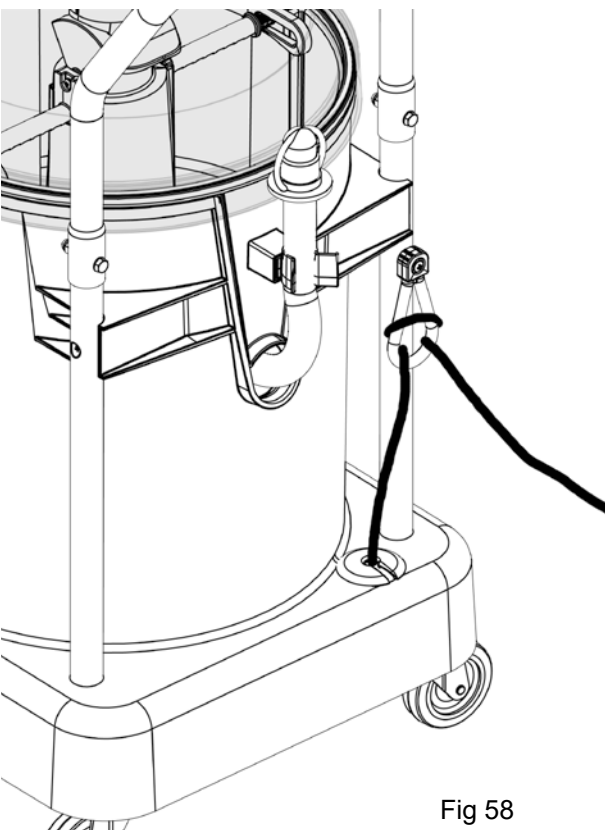


Fig 58

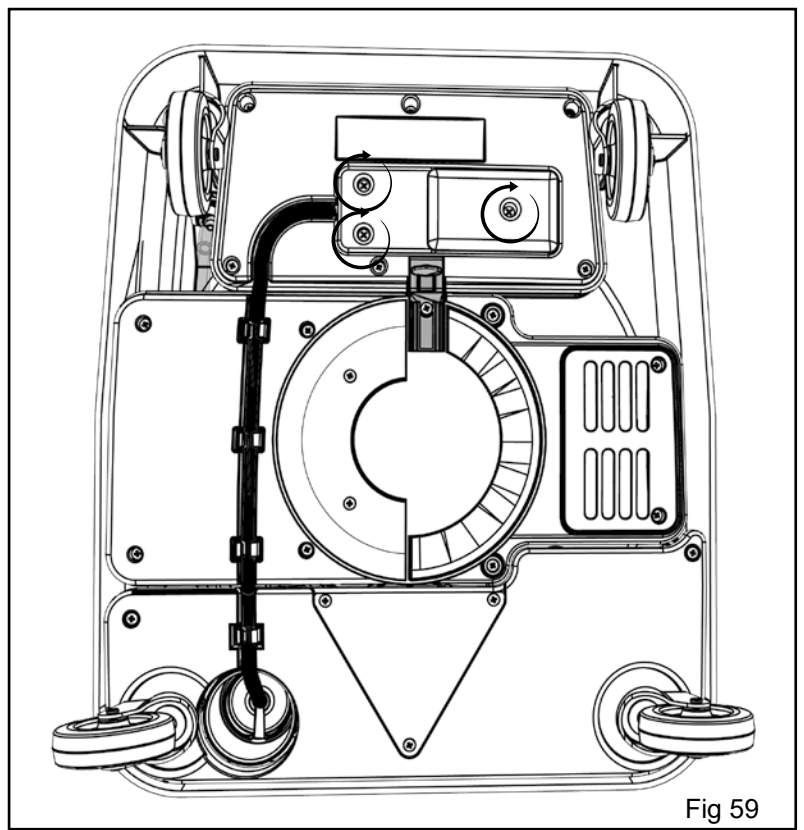


Fig 59


Trouble-Shooting

PROBLEM	CAUSE	SOLUTION
Machine will not operate	Missing or blown plug fuse. Mains power cable damaged.	Replace fuse. Replace damaged cable.
Vacuum will not operate	Vacuum not turned on. Vacuum fuse missing or blown.	Turn on vacuum. Replace missing or blown fuse.
Pump will not operate	Pump not turned on. Pump fuse missing or blown.	Turn on vacuum. Replace missing or blown fuse.
Poor water pick up	Waste tank full. Clogged / blocked vacuum hose. Blocked floor-tool. Waste tank not locked in place.	Empty waste tank. Remove and clean. Remove and clean. Lock in place (see page 12)
Little or no water flow.	Clean-water tank empty Clean-water tank filter blocked Nozzles blocked	Fill clean-water tank. Remove and clean. Remove and clean.

Recommended Spare Parts NHL 15

Part number	Description	Part number	Description
237193	Dome	607248	BS27 Kit
525010	Top bucket c/w dump hose	602399	4.0m Hose
525009	Drum c/w water fittings	602922	Wand (bend)
313100	Castor (x4 Pack)	602920	Wand (Straight)
207119	Vac filter	602937	Wand (Extension)
220179	6.3 amp time lag fuse	602200	Tri jet floor tool
208464	Filter cap	602300	Solution tube c/w trigger
236010	UK plugged cable (10m)	602225	Upholstery tool
236124	Euro plugged cable (10m)		
236018	Swiss plugged cable (10m)	607246	B26 Kit
236022	South African cable (10m)	602399	4.0m Hose
208425	Brass spray nozzle	602225	Upholstery tool
291023	'O' Ring		

Wiring Diagram

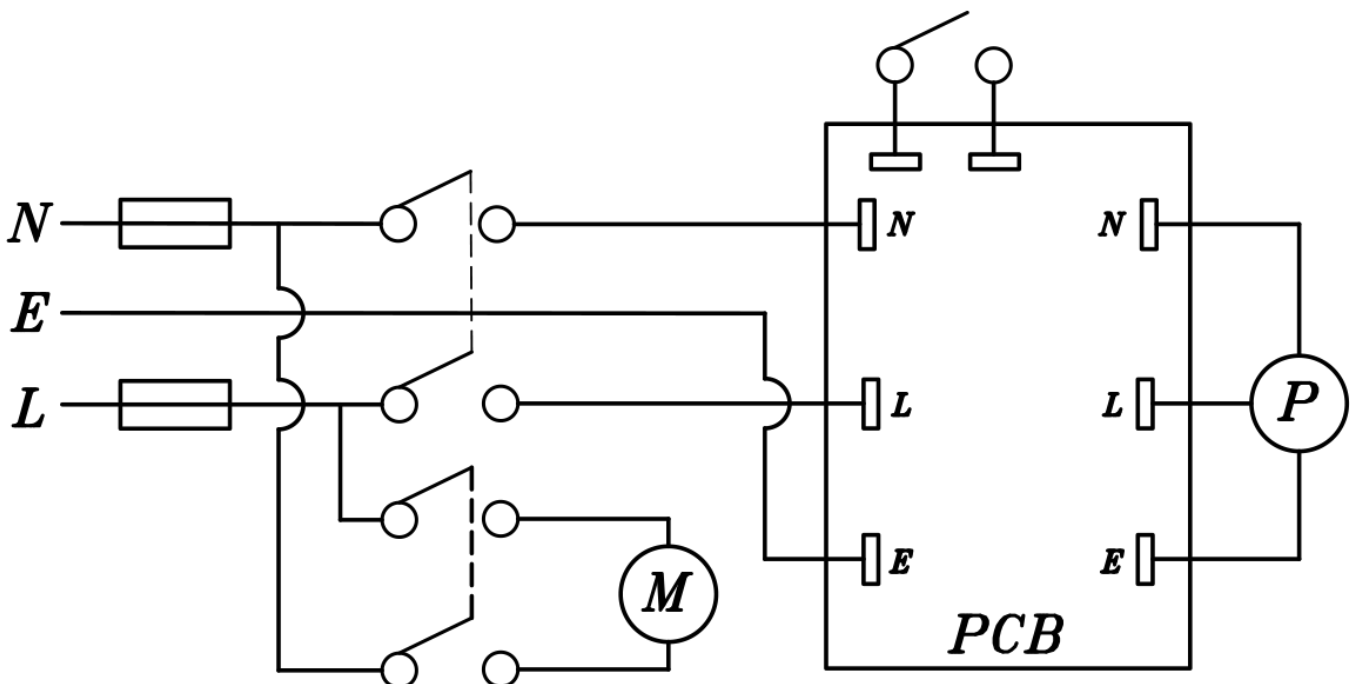

Numatic International Warranty

Numatic International Limited warrant to the original purchaser that its products are free of defects in both material or workmanship for the period shown below:-

Homecare and Cleancare Vacuum cleaners.....	2 Years
Rotary Floor Machines.....	2 Years
Twintec Auto Scrubber Dryer.....	1 Year
Vario Ride-On Scrubber Dryer.....	1 Year / 1500 hours
Mopping, Compacts, Combi and Servocare Products.....	1 Year
Individual Accessories and Spare Parts.....	6 Months

Note: This warranty expressly excludes consumable parts such as carbon brushes, floor brushes, mops, batteries etc, that are considered replaceable from time to time during the normal working life of the machine.

Using non Numatic dustbags can be detrimental to both machine performance and life and may invalidate the Warranty.

- A. The warranty period commences from the date the goods are purchased.*
- B. All warranty claims must be processed through the Dealer from whom the equipment was purchased. The Dealer will co-operate with the purchaser throughout the warranty claims procedure and will arrange any necessary repairs using genuine Numatic parts.*
- C. If the original Dealer is no longer able to fulfil his obligations please contact Numatic International Limited with full details of the claim and proof of purchase so that this may be processed without delay.*
- D. Any warranty claim can only relate to the specific part that is proven to be at fault and for which a replacement will be supplied but cannot be extended to constitute a claim against the complete machine.*
- E. Numatic International will supply the Dealer with any warranty parts required, subject to the claim being validated, after return of the faulty items in accordance with Numatic International Limited's General Conditions of Sale.*
- F. Claims will not be accepted if they are the result of fair wear and tear, misuse or abuse of any kind.*
- G. No replacement will be given unless the appropriate evidence of the validity of the claim has been provided to the satisfaction of Numatic International Limited.*
- H. Numatic International Limited reserve the right to charge for any unnecessary work carried out as a result of an invalid claim.*
- I. No variation to this warranty may be made or implied by any member of Numatic International Limited or its Dealers unless such variation is in writing and authorised by the Company*

Numatic

Numatic International Limited. Chard, Somerset, TA20 2GB

Telephone: 01460 68600 Fax: 01460 68458

© Numatic International Limited

UKCA Declaration of Conformity	
Manufacturer:	Numatic International Limited Chard Somerset TA20 2GB www.numatic.co.uk
Product:	NHL
Description:	Vacuum Cleaner – Commercial – Spray Extraction, Wet & Dry
We, Numatic hereby declare under our sole responsibility, that the above-mentioned product(s) is/are in conformity with the following directives and standards.	
S.I. 2008: 1597	Supply of Machinery Regulations EN60335-1:2012 + AC:2014 + A11:2014 + A13:2017 + A15:2021 EN60335-2-69:2012 EN60335-2-69:2012 EN62233:2008
S.I. 2016: 1091	EMC Regulations EN55014-1:2017 + A11:2020 EN55014-2:1997 + A1:2001 + A2:2008 EN61000-3-2:2014 EN61000-3-3:2013
S.I. 2012: 3032	RoHS Regulations

Authorised Signatory: Mr. Matthew Coles

Position: Head of Technology
Numatic International Limited,
Chard,
Somerset, TA20 2GB, UK

Signed: *M Coles* Date: 5th February 2024

DEC-063 V2.2

EU, EC, EL, UE, ES: Declaration of Conformity Prohlášení o shodě Konformitiserklæring Overensstemmelseerklæring Declaración de conformidad Vastavusdeklaratsioon Déclaration de conformité	Декларация за съответствие Длъжен суочићувањем Mégfelelősegi nyilatkozat Dichiarazione di conformità Atitikties deklaracija Conformiteitsverklaring Samsvarserklæring Declaração de conformidade	Declaración de conformidad Dichiarazione di conformità Atitikties deklaracija Conformiteitsverklaring Samsvarserklæring Declaração de conformidade	Numatic International Limited Chard Somerset TA20 2GB www.numatic.co.uk NHL
Manufacturer: / Выrobce / Hersteller / Fabrikant / Fabricante / Tootja / Fabricant / произвођитељ / Κατασκευαστής / Gyártó / Fabricante / Gamintojas / Fabrikant / Produzent / Fabricante / Producent / Producător / производитель / Tillverkare / Proizvajalca / Valmistaja:	Numatic International Limited Chard Somerset TA20 2GB www.numatic.co.uk NHL	Numatic International Limited Chard Somerset TA20 2GB www.numatic.co.uk NHL	
Product: / Produkt / Produkt / Produkt / Product, Toode, Produkt / Подукт / Проток / Prodotto / Produkta / Artikel / Produkt / Productos / Produkt / Товар / Produkt / Izdelka / Tuote:	Produkt / Produkt / Produkt / Produkt / Product, Toode, Produkt / Подукт / Проток / Prodotto / Produkta / Artikel / Produkt / Productos / Produkt / Товар / Produkt / Izdelka / Tuote:	Produkt / Produkt / Produkt / Produkt / Product, Toode, Produkt / Подукт / Проток / Prodotto / Produkta / Artikel / Produkt / Productos / Produkt / Товар / Produkt / Izdelka / Tuote:	
Description: / Opis / Beschreibung / Beskrivelse / Descripción / Kirjeldus / Apibūdinimas / Omschrijving / Beskrivelse / Descrição / Opis / Descrîere / Описание / Beskrivning / Opis / Kuvaus:	Kirjeldus / La description / Описание / Περιγραφή / Leirás / Descripción / Apibūdinimas / Omschrijving / Beskrivelse / Descrição / Opis / Descrîere / Описание / Beskrivning / Opis / Kuvaus:	Description / La description / Описание / Περιγραφή / Leirás / Descripción / Apibūdinimas / Omschrijving / Beskrivelse / Descrição / Opis / Descrîere / Описание / Beskrivning / Opis / Kuvaus:	
EN We, Numatic hereby declare under our sole responsibility, that the above-mentioned product(s) is/are in conformity with the following directives and standards.	EN Мы, Numatic проглашяеме на svou vlnou odpovědnost, že výše uvedeny výrobek je ve shodě s následujícími směrnici a normami. DE Wir, Numatic erklären in alleiniger Verantwortung, dass das oben genannte Produkt den folgenden Richtlinien und Normen entspricht. DA Vi, Numatic erklærer hermed under eget ansvar at ovennævnte produkt(er) er i overensstemmelse med følgende direktiver og standarder. ES Nosotras, Numatic declaramos bajo nuestra única responsabilidad que el producto antes mencionado está en conformidad con las siguientes directivas y normas ET Meie, Numatic käesolevaga kinnitame ja kanname ainuühtselt vastutust, et eespool nimetatud toode on kooskõlas järgmistele direktiivide ja FR Numatic déclare sous notre seule responsabilité que le produit mentionné ci-dessus est conforme aux directives et normes suivantes.	EN We, Numatic hereby declare under our sole responsibility, that the above-mentioned product(s) is/are in conformity with the following directives and standards. CS My, Numatic prohlašujeme na svou vlnou odpovědnost, že výše uvedeny výrobek je ve shodě s následujícími směrnici a normami. DE Wir, Numatic erklären in alleiniger Verantwortung, dass das oben genannte Produkt den folgenden Richtlinien und Normen entspricht. DA Vi, Numatic erklærer hermed under eget ansvar at ovennævnte produkt(er) er i overensstemmelse med følgende direktiver og standarder. ES Nosotras, Numatic declaramos bajo nuestra única responsabilidad que el producto antes mencionado está en conformidad con las siguientes directivas y normas ET Meie, Numatic käesolevaga kinnitame ja kanname ainuühtselt vastutust, et eespool nimetatud toode on kooskõlas järgmistele direktiivide ja FR Numatic déclare sous notre seule responsabilité que le produit mentionné ci-dessus est conforme aux directives et normes suivantes.	
PT Nós, a Numatic declaramos, sob nossa exclusiva responsabilidade, que o produto acima mencionado está em conformidade com as diretrizes e normas a seguir. PL My, Numatic niniejszym oświadczamy z pełną odpowiedzialnością, że wyżej wymieniony produkt jest zgodny z następującymi dyrektywami i normami. RO Noi, Numatic Prin prezenta declarăm pe propria răspundere, că produsul mai sus menționat este în conformitate cu următoarele standarde și directive. RU Мы, Нуматик овим изъавьяем под луной одговоршты, да наведенот проиъавод, је у складу са следяишм директивама и стандардима. SV Vi Numatic förklarar härmed under eget ansvar att ovan nämnda produkt överensstämmer med följande direktiv och normer. SL Mi, Numatic izjavljamo s polno odgovornostjo, da je zgoraj omenjeni izdelek v skladu z naslednjimi smernicami in standardi. FI Me, Numatic täten vakuuttamme omalla vastuulla, että edellä mainittu tuote on yhdenmukainen seuraavien direktiivien ja standardien mukaisesti	PT Nós, a Numatic declaramos, sob nossa exclusiva responsabilidade, que o produto acima mencionado está em conformidade com as diretrizes e normas a seguir. PL My, Numatic niniejszym oświadczamy z pełną odpowiedzialnością, że wyżej wymieniony produkt jest zgodny z następującymi dyrektywami i normami. RO Noi, Numatic Prin prezenta declarăm pe propria răspundere, că produsul mai sus menționat este în conformitate cu următoarele standarde și directive. RU Мы, Нуматик овим изъавьяем под луной одговоршты, да наведенот проиъавод, је у складу са следяишм директивама и стандардима. SV Vi Numatic förklarar härmed under eget ansvar att ovan nämnda produkt överensstämmer med följande direktiv och normer. SL Mi, Numatic izjavljamo s polno odgovornostjo, da je zgoraj omenjeni izdelek v skladu z naslednjimi smernicami in standardi. FI Me, Numatic täten vakuuttamme omalla vastuulla, että edellä mainittu tuote on yhdenmukainen seuraavien direktiivien ja standardien mukaisesti		
2006/42/EC	Machinery Directive EN60335-1:2012 + AC:2014 + A11:2014 + A13:2017 + A15:2021 EN60335-2-69:2012 EN60335-2-68:2012 EN62233:2008		
2014/30/EU	EMC Directive EN55014-1:2017 + A11:2020 EN55014-2:1997 + A1:2001 + A2:2008 EN61000-3-2:2014 EN61000-3-3:2013		
2011/65/EU	RoHS Directive		

Authorised Signatory: Mr. Matthew Coles

Position: Head of Technology
Numatic International Limited
Chard,
Somerset, TA20 2GB, UK

Signed: *M Coles* Date: 5th February 2024

DEC-063 V3.3



numatic.com

Numatic International Limited (Head Office)

Chard, Somerset TA20 2GB, UNITED KINGDOM
Tel: 01460 68600 numatic.com

Numatic International GmbH

Fränkische Straße 15-19, 30455 Hannover, DEUTSCHLAND
Tel: +49 (0) 511 984 2160 numatic.de

Numatic International Denmark

Fränkische Straße 15-19, 30455 Hannover, DEUTSCHLAND
Tel: +45 (0) 316 40808 numatic-online.dk

Numatic International S.A.S

13/17 rue du Valengelier, EAE la Tuilerie, 77500 Chelles, FRANCE
Tel: +33 (0) 164 726 161 numatic.fr

Numatic International BV

Vennootsweg 15, 2404 CG, Alphen aan den Rijn, NEDERLAND
Tel: +31 (0) 172 467 999 numatic.nl

Numatic International Schweiz AG.

Sihlbruggstrasse 3A, 6340 Baar, SCHWEIZ
Tel: +41 (0) 41 768 0760 numatic.ch

Numatic International (PTY) Ltd.

Cnr. 16th & Pharmaceutical Road, Randjes Park, Midrand 1685, SOUTH AFRICA
Tel: +27 (0) 861 686 284 numatic.co.za

Numatic International ULDA

Rua Francisco da Silva Duarte, n°79,
4475-269 Santa Maria de Avioso, Castelo da Maia, PORTUGAL
Tel: +351 220 047 700 numatic.pt

NUMATIC INTERNATIONAL SPAIN, S.L.U.

Av. Baix Llobregat, 5-7, Oficina bajos 1 (Parc Negocis Mas Blau II),
08820 El Prat de Llobregat (Barcelona) SPAIN
Tel: +34 93 647 22 22 numatic.es

Numatic International Italy S.R.L

Via Luigi Galvani, 2, Z.I. Talponedo, 33080 Porcia (PN), ITALY
Tel: +39 (0) 434 046 211 numatic.it

Specification subject to change without prior notice
numatic.com © Numatic International Limited